1. Install the label

① Insert the label into the slot and press the handle.



2. Printing

① Turn the dial to "□"and press the handle until the label leaks out. Do not press the handle while turning the dial.



3. Cut the label

① Turn the dial to "≼"and press the handle to cut. Do not press the handle while taking out the label.

*Do not cut the label before it leaks out.



① After cutting, the label cannot be taken out immediately. You need to turn the font dial one space to the left or right before taking out the label.































